

100
101 Series

OPERATOR'S MANUAL

WITH PARTS LIST

EDGER/TRIMMER



- Specifications
- Operating Instructions
- Maintenance Information

MCLANE

MANUFACTURING

6814 Foster Bridge Blvd.
Bell Gardens, CA 90201
(562) 633-8158
Fax: (562) 602-0651
www.mclanemower.com

CONTENTS

	Page		Page
General Safety Suggestion	1	Correct Edger-Trimmer Usage	6
		Operation of the Edger-Trimmer	6
		Maintaining Your Edger-Trimmer	7
Warranty	6	Maintenance Check List	7
Parts Illustration	8	Engine	7
Parts List	9&10	Oil Quality	7
		Oil Level	7
Edger Trimmer Features	2	Oil Changes	7
		Spark Plug	7
Assembly	3	Blade Maintenance	7
Attaching the Handle	3	Blade Change	7
Installing Throttle Wire	3	Lubrication	7
Fill Engine With Oil	3	Storage Instructions	12
		Maintenance Notes	12&13
Operating Your Edger-Trimmer	4	Trouble Shooting Check List	11
Correct Engine Operation	4		
Fuel Specification	3	CURB WHEEL ATTACHMENT	11
Oil Specification	3		
Starting The Engine	4		
Engaging Drive Belt	4		
Stopping The Engine	4		



CAUTION



This symbol marks important instructions relating to your personal safety. To avoid the possibility of injury, read and follow such instructions carefully.

When the manual refers to the left or right side of the edger-trimmer, it means your left and right when standing in the operating position.

GENERAL SAFETY SUGGESTIONS

Recommended by Outdoor Power Equipment Institute

DO NOT MODIFY EDGER-TRIMMER

Unauthorized modification to the edger-trimmer may impair its function and safety and affect edger-trimmer life.

Training

1. Read the Operating and Maintenance Instruction Manual carefully. Be thoroughly familiar with the controls and proper use of the equipment.
2. Never allow children to operate edger-trimmer.
3. Keep area of operation clear of all persons, particularly small children and pets.
4. Thoroughly train anyone using the edger-trimmer. Make sure all edger-trimmer operators know the safety, operating and maintenance procedures.

Preparation

1. Thoroughly inspect the area where edger-trimmer is to be used, and remove all stones, sticks, wire, bones and other foreign objects which might be picked up and thrown.
2. Do not operate edger-trimmer when barefoot or wearing open sandals. Always wear substantial foot wear, and pants or slacks that cover your legs when operating edger-trimmer.
3. Check fuel before starting engine. Do not fill gasoline tank indoors, when engine is running, or while engine is still hot. Clean off any spilled gasoline before starting engine.
4. Disengage cutterhead drive before starting engine.
5. Do not use edger-trimmer unless blade guard, belt guards and debris guard are properly in place.
6. Edge or trim only in daylight or in good artificial light.
7. Never operate equipment in wet grass. Always be sure of your footing. Keep a firm hold on the handle and walk, never run.

Operation

1. Start the engine carefully. Keep hands and feet well away from blade.
2. Do not change engine governor setting or over-speed engine.
3. Wear safety glasses when operating edger-trimmer.
4. Keep clear of discharge opening at all times. Never direct discharge of any material toward bystanders nor allow anyone near machine while it is in operation.
5. Stop blade when crossing gravel drive, walks, or roads.
6. After striking a foreign object, stop the engine and inspect edger-trimmer for damage. Repair damage before starting engine.
7. Avoid loss of control or tipping on slopes and sharp corners by reducing speed.
8. If edger-trimmer should start to vibrate abnormally, stop the engine and check for the cause. Vibration is generally a warning of trouble.
9. Stop the engine whenever you leave the edger-trimmer, and when making repairs or inspections.

10. When repairing or inspecting make certain blade and all moving parts have stopped. Disconnect spark plug wire and keep wire away from plug to prevent accidental starting.
11. Do not run engine indoors.
12. Shut engine off and wait until blade comes to a complete stop before moving grass that may clog blade guard.
13. Watch out for traffic when working near roadways.
14. Stay alert for uneven sidewalks, holes in terrain or other hidden hazards when using edger-trimmer. Always push slowly over rough ground.
15. Remember, never operate edger-trimmer unless blade guard, belt guards and debris guard are properly in place.
16. Disengage power to cutterhead and stop engine before leaving edger-trimmer, before making repairs, inspections or adjustments, and when transporting or not in use.


Maintenance and Storage

1. Check blade mounting nut frequently for proper tightness
2. Keep all nuts, bolts and screws tight to be sure equipment is in safe working condition
3. Never store edger-trimmer with gasoline in the tank in a building where fumes may reach an open flame or spark. Be sure engine has cooled before storing in any enclosure.
4. To reduce fire hazard, keep engine free of grass, leaves or excessive grease.
5. After operating engine, never touch exhaust muffler until it has cooled completely.
6. Keep edger-trimmer in good operating condition and keep safety devices in place.

 **CAUTION** 
TO AVOID INJURY

READ OPERATOR'S MANUAL • KNOW LOCATION & FUNCTION OF CONTROLS • MAINTAIN SAFETY DEVICES • REMOVE POTENTIAL THROWN OBJECTS • NEVER EDGE OR TRIM NEAR PEOPLE • NEVER CARRY PASSENGERS • LOOK BEFORE BACKING • AVOID SLIPPERY OR STEEP AREAS • STOP BLADE & BACK SLOWLY IF MACHINE STOPS • AVOID BLADE UNLESS BLADE & ENGINE ARE STOPPED.

EDGER-TRIMMER FEATURES

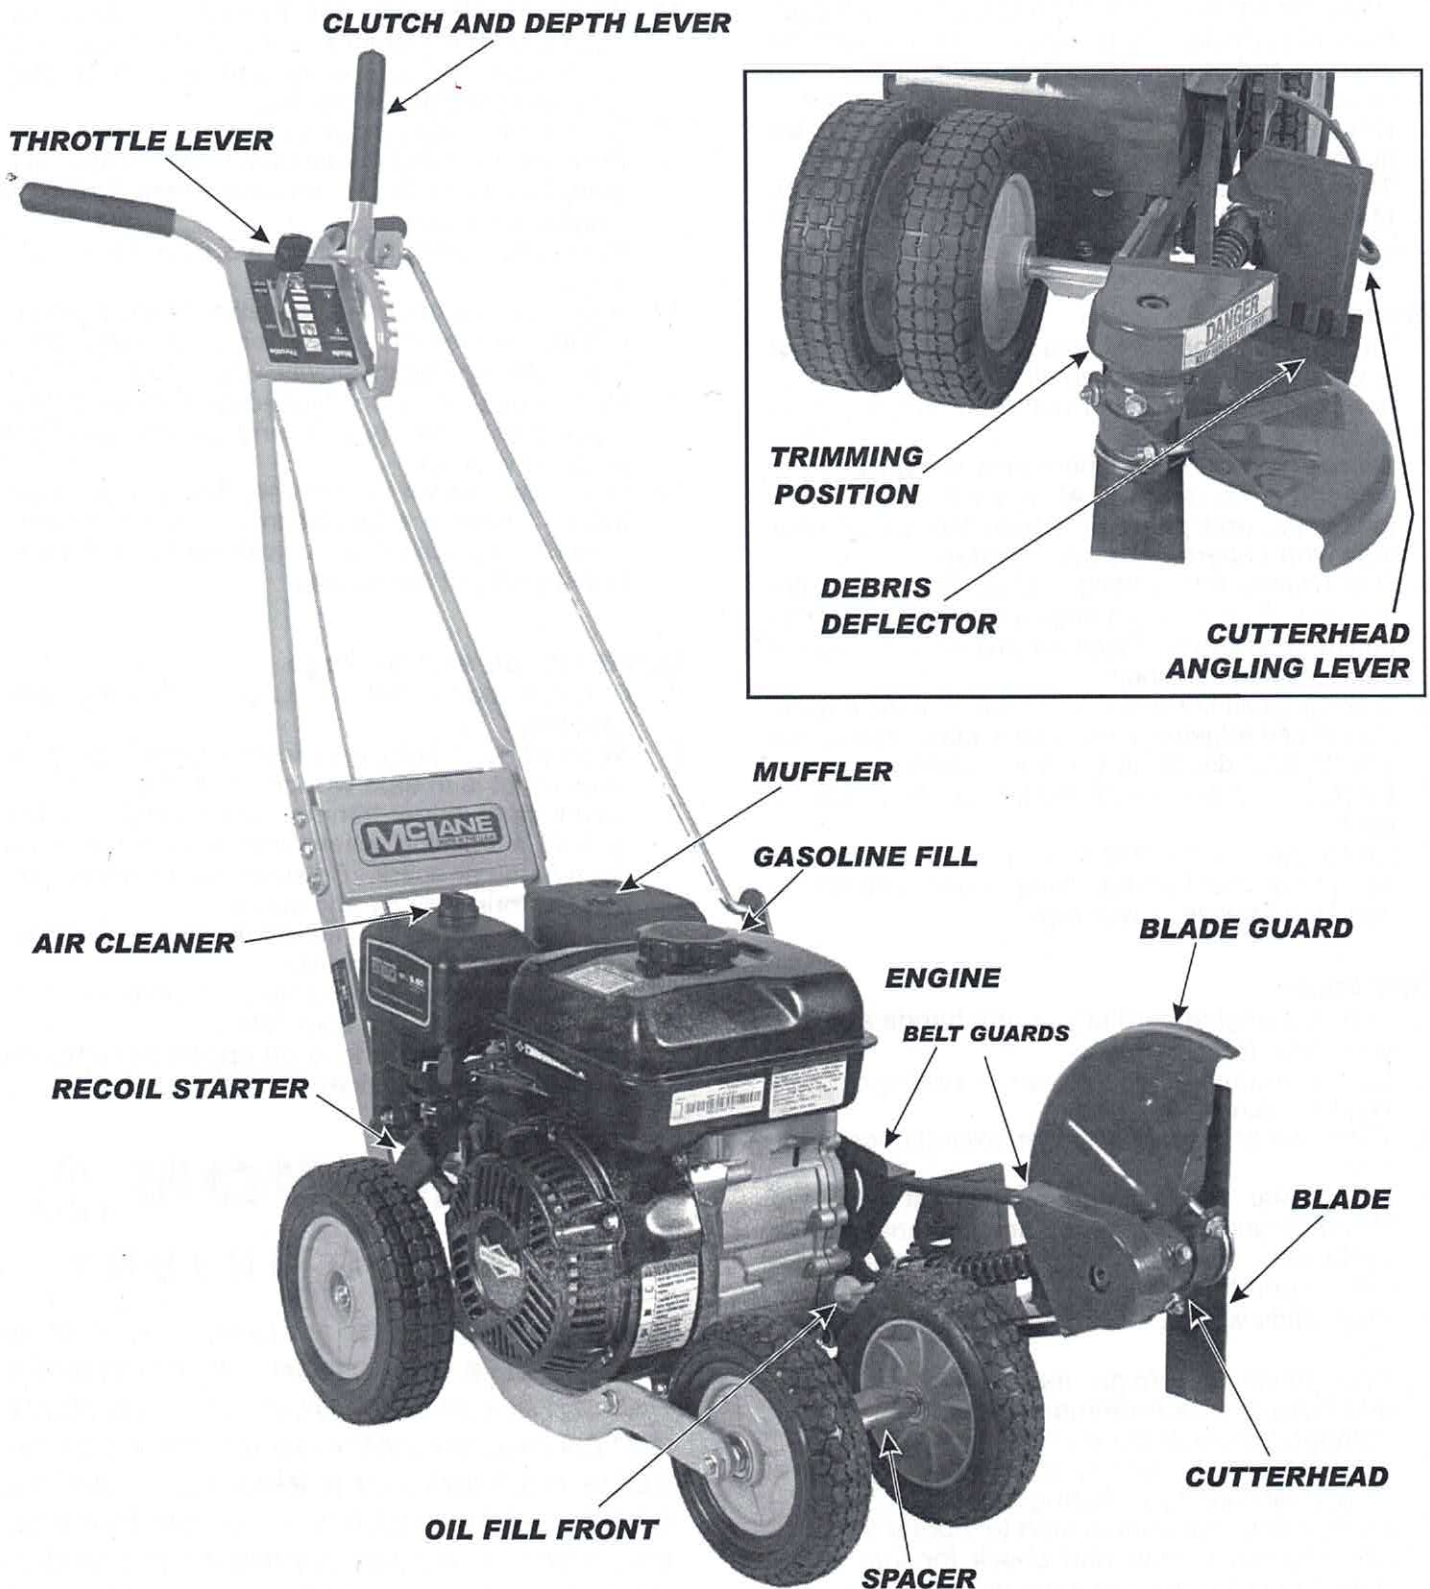

ASSEMBLY

TOOLS REQUIRED: 7/16" Wrench, Pliers, Screwdriver

NOTE: Reference to Left or Right side of machine is from the operator's position at the handle, facing forward.

The lawn edger, except the handle and throttle control, is fully assembled, packed and shipped in one container.

ATTACHING THE HANDLE

1. Remove handle brace, nuts, and bolts. Align the handle, lower support, and handle brace holes. Use all six nuts and bolts. Leave bolts loose until Steps 2 and 3 completed (Fig. 1).
2. Install control rod into upper and lower pivot holes and secure with cotter pins (fig. 1). Oil pivots lightly before installing rod.
3. Move clutch-depth lever into rear notch of quadrant on handlebars. Move cutterhead angling lever to top notch of quadrant.
4. Remove spark plug wire from spark plug. Move throttle to OFF position. Check clutch operation by pulling recoil starter rope. If blade turns when depth lever is in top notch, loosen handle bolts and pull towards operator. Snug bolts and check clutch operation again.
5. Slip on the handle grips.

- IMPORTANT NOTE -

Make sure blade does not turn when lever is in top notch - disengaged.

Tighten bolts.

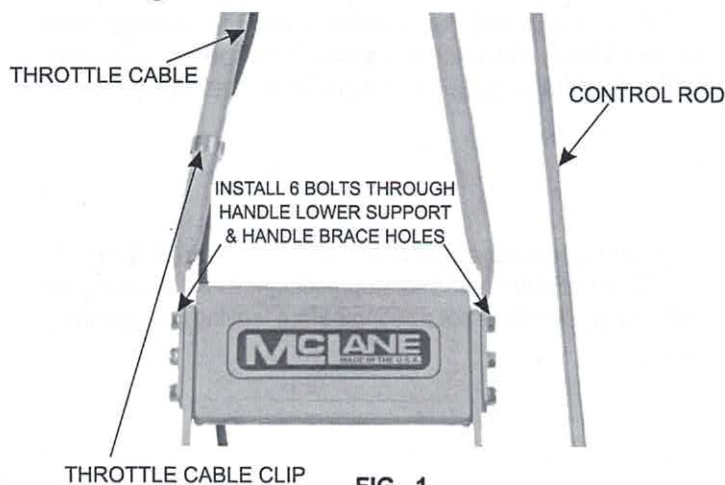


FIG. 1

FILL ENGINE WITH OIL

NOTE: There is no oil in engine crankcase.

1. Follow Instructions in the engine manual for correct grade of oil, oil filling and oil changing.
2. Do not mix oil with gasoline.

INSTALLING THE THROTTLE WIRE

1. If the throttle cable is not attached to the engine carburetor, follow the instructions in the engine operating manual. Some throttle cables can not be attached before shipping

Check oil level of engine every time edger-trimmer is used. An improper oil level can cause extensive internal damage to engine.

FUEL SPECIFICATION

1. Follow fueling instruction in the engine manual

⚠ CAUTION ⚠

Handle fuel with care - it is highly flammable. Use only approved fuel container. Never add fuel while engine is running. Fill fuel tank outdoors with extreme care. Never fill fuel tank indoors. Replace gasoline cap securely and wipe up all spilled fuel.

Always clean area around fuel cap before removing it to prevent excessive amounts of dirt from entering fuel system. Also insure that fuel storage container you are using is clean and in good condition.

CORRECT ENGINE OPERATION

⚠ CAUTION ⚠

Before starting engine, become familiar with all controls. Read this Operator's Manual thoroughly. Always check engine oil level before starting engine.

⚠ WARNING ⚠

Care should be taken to avoid inhaling exhaust gasses as they contain carbon monoxide gas which is colorless and odorless. Carbon monoxide is a dangerous gas that can cause unconsciousness and is potentially lethal. Do not run engine in confined areas such as closed garage.

OPERATING YOUR EDGER-TRIMMER

CORRECT ENGINE OPERATION

⚠ CAUTION ⚠

Always disengage edger-trimmer blade and shut engine off when leaving the edger-trimmer unattended, even if for just a few minutes. Prevent accidents; don't give children or unauthorized persons an opportunity to operate this machine.

⚠ CAUTION ⚠

Always start edger-trimmer in motion slowly. Sudden starts can be damaging to the equipment and could cause loss of operator control.

⚠ CAUTION ⚠


Rotating blade can throw dirt or debris. Wear safety glasses when operating the edger-trimmer.

ADJUSTING CUTTERHEAD ANGLE

Before starting engine adjust cutterhead angle. The cutterhead angling lever, located on the left hand side of the frame, enables the operator to position the blade horizontally for trimming or choose several vertical positions for edging.

⚠ WARNING ⚠


Never adjust cutterhead angle when engine is running.

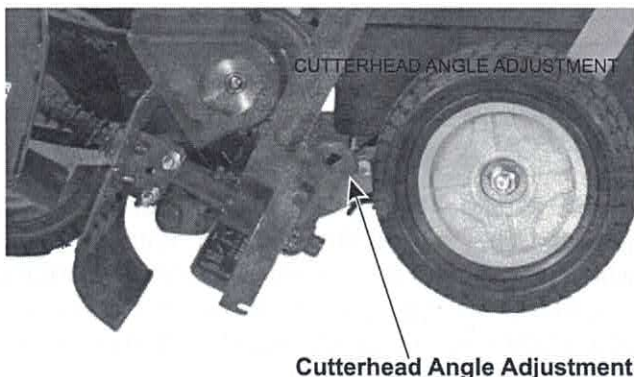

Cutterhead Angle Adjustment

CLUTCH AND DEPTH LEVER SETTING

Clutch and Depth lever is used to engage and disengage the drive belt which operates the blade. It is also used to regulate the depth of edging and height of trimming.

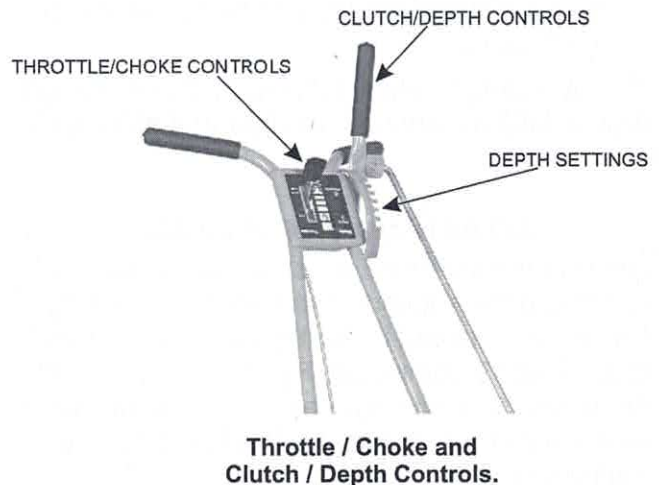

STARTING THE ENGINE

Be sure the clutch lever is in the rear DISENGAGED position before starting engine.

Manually pull out choke on engine.

Grasp the recoil starting handle and pull quickly. Return the handle slowly. If the engine fails to start after three or four pulls, lower the throttle to the detented full throttle (fast) position.

Once the engine starts, push the choke to the off position. Use the SLOW position to idle the engine.

ENGAGING THE DRIVE BELT

Move clutch and depth lever forward to engage drive belt and blade. Notches in base of lever permit adjusting depth of cut for edging and height for trimming.

TO STOP

Disengage edger trimmer clutch and depth lever.

Move throttle control to stop position. Make sure engine is stopped and blade is not rotating before leaving the operating position.

WHEEL POSITIONING

The wheel adjusting spacer should be centered between the wheels when edging in the vertical position. Wheels must be in the dual position to the right when edging with cutterhead in an angle position or trimming (horizontal position).

⚠ WARNING ⚠

Do not change wheel positions when engine is running.

Remove the spacer from between the wheels by lifting on spacer with open side down. Slice the left front wheel on the axle toward the right wheel and once again install the spacer on the axle between the frame and wheel.

⚠ CAUTION ⚠

Before starting the engine, be sure the wheels and cutterhead are positioned so the blade will not strike the wheels.



Wheel Positioning

CURB RIDING POSITION

Remove the spacer from between the front wheels. Slide the right wheel toward the left wheel and replace the spacer between the wheel and right frame. Only vertical edging can be done in this position.

NOTE

As pictured above, wheels are positioned to the right for trimming. The wheels are positioned to the left for curb riding edging.

NOTES

[illegible]

CORRECT EDGER-TRIMMER USAGE

⚠ CAUTION ⚠

Read all manuals provided before operating. These manuals give a detailed description of operation and point out other areas of caution. Familiarize yourself thoroughly with equipment before attempting to use it.

OPERATION OF THE EDGER-TRIMMER

⚠ WARNING ⚠

Keep all shields in place. Never attempt to clear discharge areas or edger-trimmer blade without disengaging the edger-trimmer and stopping the engine.

Your edger-trimmer is designed to give a professionally groomed appearance to your lawn with minimum effort. It will edge lawns at walks, around flower beds, trim close to poles and hydrants, also under fences and other hard to reach locations. For best appearance around flowers adjust blade to 20° angle cut.

For best results adjust the cutting depth of the blade to within ½" to 1" deep (with a new blade usually in the third notch of the adjustment bracket at handle).

Too deep a cut will put unnecessary stress on engine and accelerate blade wear. Cutting too shallow allows rapid regrowth of roots.

Make sure to re-adjust cutting depth as blade begins to wear at tips.

Avoid edging or trimming in wet grass as it may clog up in the blade guard and cause splattering. The general appearance will be much better when grass is dry.

Always push edger-trimmer at moderate walking speed – at this speed your edger-trimmer is designed to cut more than 100 ft. per minute. Four wheel design of edger-trimmer permits easy and stable edging, riding securely on sidewalk or cement surfaces.

Around specially shaped flower beds or curved sections follow these simple steps: It will be easier to cut around corners when front wheels are placed together at right side of trimmer-edger. Before starting engine remove wheel spacer clip on front axle, slide wheels to side away from blade and replace spacer.

After starting engine, set blade depth and by slightly lifting rear wheels, guide edger-trimmer around corners and odd angles.

MAINTAINING YOUR EDGER-TRIMMER

⚠ CAUTION ⚠

To minimize the chance of injury, perform all maintenance and adjustments on your edger-trimmer with engine off unless instructed otherwise in this section. Use extreme care when working near operating machinery. Do not wear loose fitting clothing. Remove watch and jewelry before beginning work and observe common safety practices when using tools.

MAINTENANCE CHECKLIST

1. Refer to the engine manual for engine maintenance instructions.
2. Correct grade of oil and gasoline is included in the instructions.

Check the oil level of the engine every time the edger-trimmer is used. An improper oil level can cause extensive internal damage to engine.

Failure to change engine oil at recommended intervals can lead to serious damage to engine. This is especially true when using detergent oils which are designed to hold impurities in suspension; when saturation point is reached, oil may suddenly break down to form a gelatin-like substance which seriously impairs and can even stop flow of oil. Increase frequency of oil changes if edger-trimmer is operated under extremely dusty conditions.

SPARK PLUG

Engine misfire, or generally poor operation, is often caused by spark plug in poor condition or with incorrect spark gap setting. Sparkplug should be checked after each fifty hours of operation. Replace a spark plug at one hundred operating hour intervals, or sooner if inspection reveals fouling or excessive deterioration.

Always clean area around spark plug before removing it to prevent dirt from entering engine. Use a spark wrench to remove and install plug.

Check condition of plug. Good operating conditions are indicated by a light coating of grey or tan deposit. A dead white, blistered coating could indicate an "overrich" fuel mixture caused by a clogged air cleaner, or improper carburetor adjustment.

Replace spark plug that is not in good condition. Never sand blast, wire brush, scrape or reinstall spark plug in poor condition. Best results are obtained with a new plug.

Always check spark plug gap before installing a new plug or reinstalling the original plug. Use a spark plug gap gauge to adjust the electrode air gap as indicated in the engine manual.

BLADE MAINTENANCE

⚠ CAUTION ⚠

Sharp Edges of edger-trimmer blade can cut you during blade maintenance or adjustment. Use suitable covering over edges of blade to prevent bodily harm.


BLADE CHANGE

1. Place a 5/16" Allen wrench on the inside of cutterhead shaft and a 3/4" wrench on the blade nut, turn to loosen nut. Remove outer washer and old blade.
2. Replace blade with only McLane blade (available in 3-pack). Place outer washer the same direction as removed and tighten nut as snug as possible.

LUBRICATION

1. The cutterhead body needs occasional greasing. Use #2 multi-purpose grease.
2. The cutterhead mandrel has two precision sealed bearings that do not need lubrication.


USE #2 MULTI-PURPOSE GREASE
GREASE FITTING LOCATION

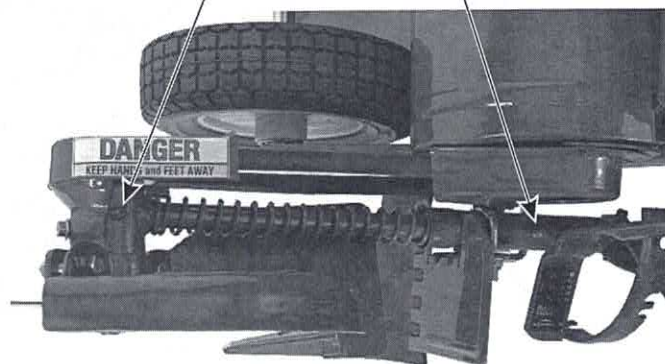

Cuttinghead Lubrication Points

Oil all exposed bearings, linkage and front wheels. Check all nuts and bolts for tightness.

Lawn Edger and Trimmer Parts Illustration

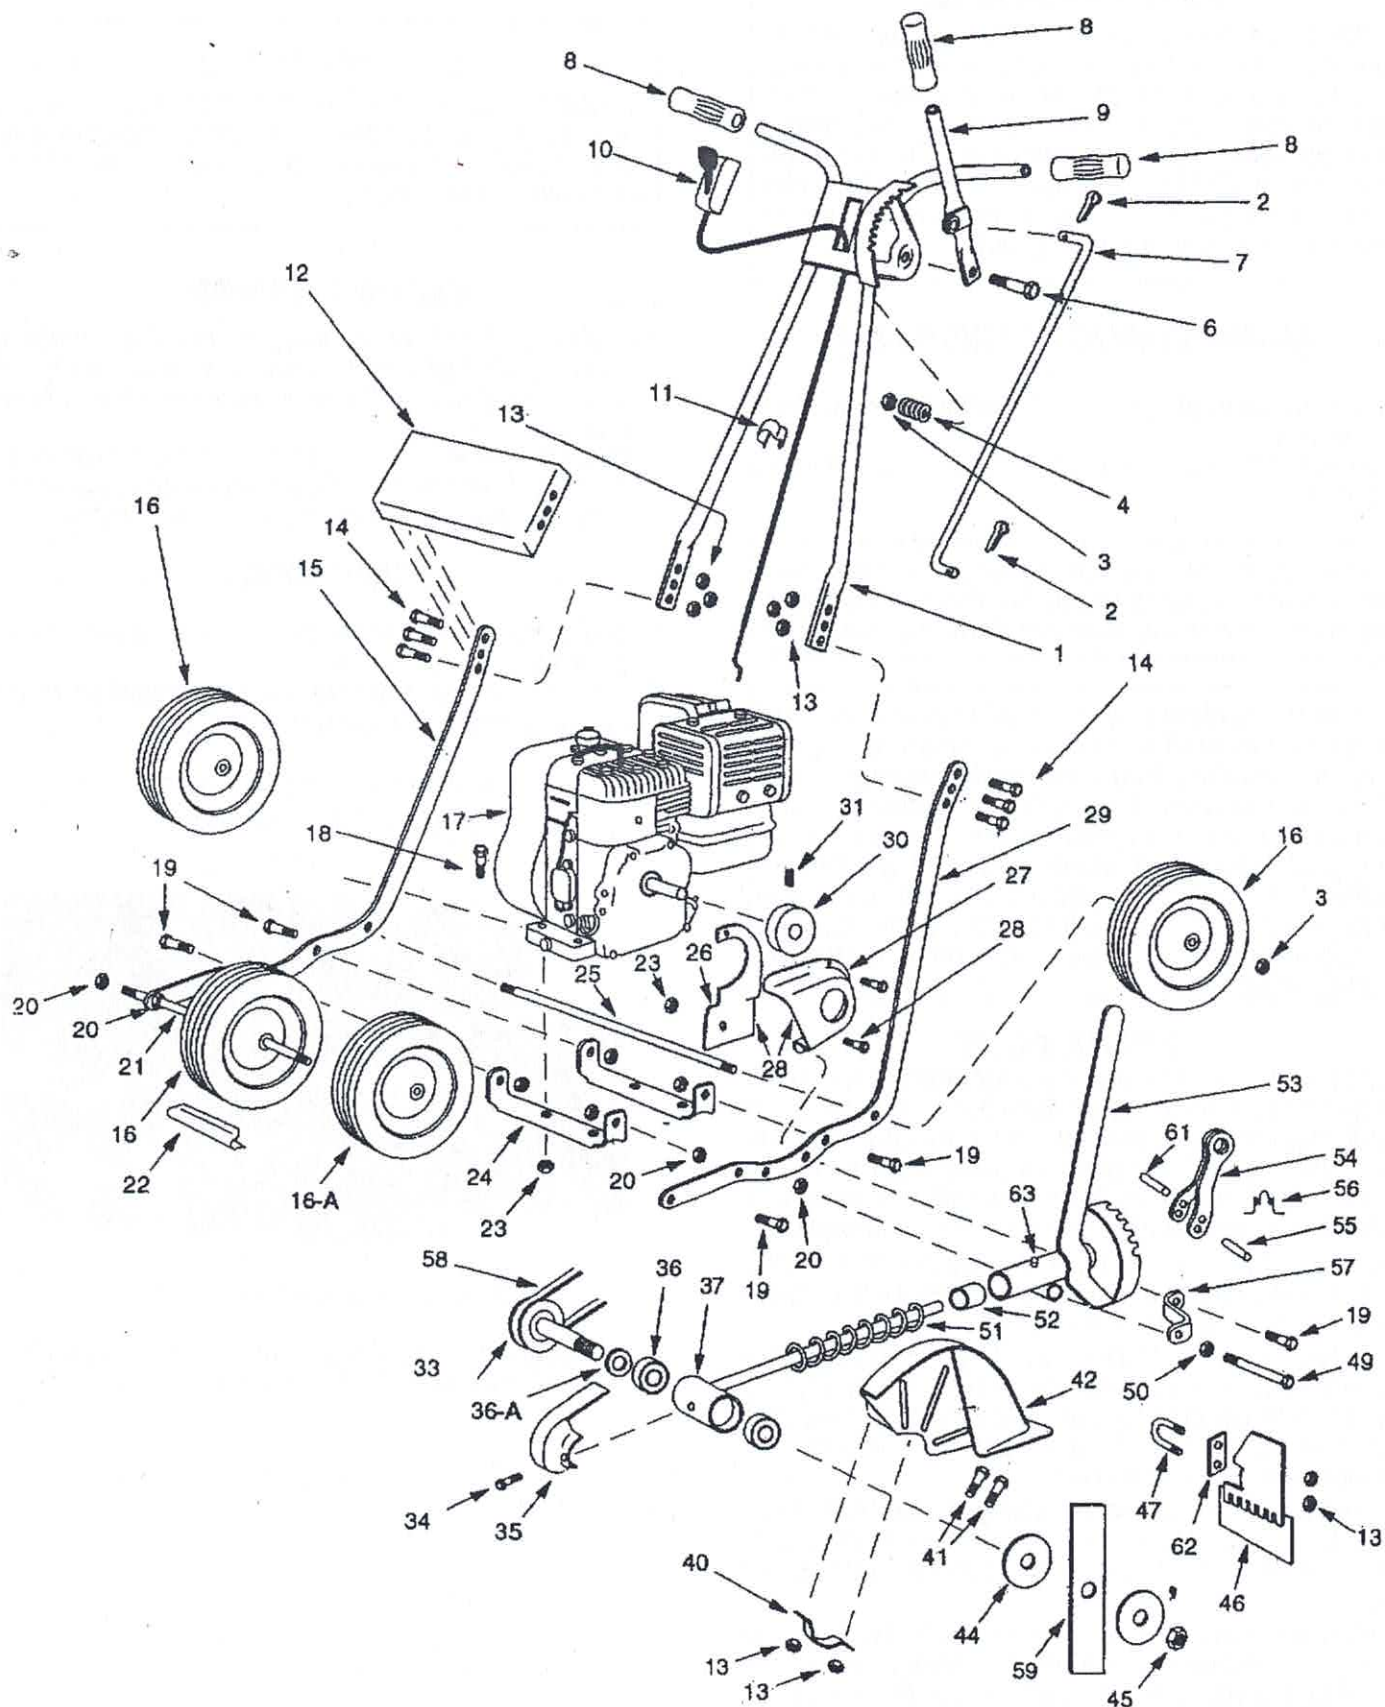

Parts List

Lawn Edger and Trimmer

REF No.	PART No.	DESCRIPTION	REF No.	PART No.	DESCRIPTION
1	2001	Handle	52	2052	Cup
2	1011	Pin, Cotter 1/8x3/4 (2 Req)	53	2053	Body, Cutterhead
3	1008	Nut Lock Hex 7/16"-14 (4 Req)	54	2054	Lever, Angle Shifting
4	2004	Spring	55	2055	Pin 5/16x2
5	2006	Bolt, Hex 7/16-14x2	56	2056	Spring
7	2007	Rod, Clutch & Depth	57	2057	Brace Cutterhead
8	1009	Grip (3 Req)	58	2058	Drive Belt (4L-300)
9	2009	Lever, Clutch & Depth	59	2059	Cutting Blade
10	1013-97-10-L	Throttle Cable	61	2061	1-1/4 Pin
	1013-97-10-R	Throttle Cable	62	2062	U-Clamp Spacer
11	1013-HD	10-32x1/2 Bolt (2 Req)	63	2063	Grease Fitting
		Nut 10-32 (2 Req)		1002	Handle And Wheel Bearing
12	1014	Cross Brace For Handle		2067	Cutting Head Complete
13	1015	Nut 1/4-28 Hex (10 Req)			Includes Part Nos: 33, 53, 51, 52,
14	1018	Bolt 1/4-28x7/8 Hex (6 Req)			54, 55, 56, 61, 37, (2)63, (2)36
15	2015	Frame, Right Hand 6" & 7"			
	2015-8	Frame, Right Hand 8"			
17	1043	Engine (State Model No.)			
18	2018	Engine Bolt 5/16-24x1-1/2 (4 Req)			
19	1074	Bolt 5/16-24x7/8 Hex (5 Req)			
20	2020	Nut 7/16-14 Hex (3 Req)			
21	2021	Front Axle 7" Wheels			
23	1075	Nut 5/16-24 Hex (9 Req)			
24	2024	6" & 7" Frame Crossmember			
26	2026	Bracket, Engine Pulley Guard			
27	2027	Guard, Engine Pulley			
	2066	Engine Pulley Guard & Bracket Complete			
28	2028	Screw #10 x 1/2 Sheet Metal (4 Req)			
29	2029	6" & 7" Frame Left Hand			
30	1063	5/8" Engine Pulley for B&S Engine			
30	1063-A	3/4" Engine Pulley for Honda Engine			
31	1065	Set Screw 5/16-24x5/16			
33	2033	Cutterhead Pulley & Shaft Comp.			
34	2034	Screw 1/4-20x1/2 Hex			
35	2035	Cutterhead Pulley Guard			
36	2036	Cutterhead Bearing (2 Req)			
36A	2043	Spring Washer (New 01/87)			
37	2037	Mandrel, Head			
40	2040	Clamp, Blade Guard			
41	2041	Bolt 1/4-28x1-1/2 Hex (2Req)			
42	2042	Blade Guard Main			
	2064	Complete Blade Guard			
44	2044	Washer, Friction (2Req)			
45	2045	Nut 1/2-20			
46	2046	Deflector, Debris Sweep			
	2046-R	Debris Sweep - Rubber Only			
47	2047	U-Clamp			
	2065	Complete Debris Guard			
49	2049	Pivot Bolt			
50	1120	Flat Washer 7/16			
51	2051	Spring Head Recoil			

ACCESSORIES

2101	Curb Wheel Attachment
2059-3	3-Pack Edger Blade
2059-HD	Heavy Duty Cutting Blade 2"x9"
*2059-HD-10	Heavy Duty Cutting Blade 2"x10"
2040-A	Blade Guide

Parts List

Lawn Edger and Trimmer

REF NO.	PART NO.	DESCRIPTION	REF NO.	PART NO.	DESCRIPTION
2101 REPLACEMENT PARTS			WIDE TIRE WHEEL REPLACEMENT PARTS		
	2101-7	Axle For Edgers With 7" Wheels	16	2016-7	7" Steel Wheel Assembly (For 100 Series Only)
	2101-8	Axle For Edgers With 8" Wheels	16	7058-7	7" Rear Wheel Complete w/Bearings
	2100-A	Plate For 2100	16-A	7075-7	7" Front Wheel Complete w/Bearings
	3066	Bolt For 2100 (2)		7059	7" Wheel Bearing (Outside) (2)
	1008	Lock Nut (2)		7060	7" Wheel Bearing (Inside) (2)
	2020	Nut 7/16"-14 (4)		7061-7	7" Tire Only
	1120	Washer (2)		7062-7	7" Rear Wheel Rim Only
	7075-7	Complete Wheel w/Bearings		7065-7	7" Front Wheel Rim Only
	1008-A	Jam Nut (2)	22	2022-A	7" Front Wheel Spacer (2-13/16" Use With 7075-7 Wheels)
**NOTE: THE 10" HEAVY DUTY EDGER BLADES CAN ONLY BE USED ON McLANE EDGERS ONLY FOR VERTICAL AND ANGLE EDGING. HORIZONTAL TRIMMING MUST NOT BE ATTEMPTED.				2022-7	7" Front Wheel Spacer (3-3/4" Use With 100 Series Only)
			25	2025-A	7" Rear Axle (11-3/8") (Use With 7058-7 Wheels)
			When ordering parts, be sure to specify model and part number. Do not order by Ref. No.		


TROUBLE SHOOTING CHART

PROBLEM	CAUSE
1. Engine Fails to start.	A. Check fuel tank for gas. B. Spark plug lead wire disconnected. C. Throttle control lever not in starting position. D. Check spark plug.* E. Carburetor improperly adjusted. Engine flooded. Remove spark plug, dry the plug, crank engine with plug removed, and throttle in off position. Replace spark plug and lead wire and resume starting procedures. F. Old / stale gas. Drain and refill with fresh gas.
2. Hard starting or loss of power.	A. Spark plug wire loose. B. Carburetor improperly adjusted.* C. Dirty air cleaner.*
3. Operation erratic.	A. Dirt in gas tank. Drain, clean and refill. B. Dirty air cleaner.* C. Water in fuel supply. Drain and refill. D. Vent in gas cap and/or carburetor plugged. Clear vent. E. Carburetor improperly adjusted.*
4. Occasional skip (hesitates) at high speed.	A. Spark plug fouled, faulty or gap too wide.* B. Carburetor improperly adjusted.* C. Dirty air cleaner.*
5. Idles poorly.	A. Carburetor idle speed too slow.* B. Spark plug gap too close.* C. Carburetor idle mixture adjustment improperly set.*
6. Engine overheats.	A. Adjust carburetor.* B. Remove any obstructions from air passages in shrouds. C. Clean cooling fins. D. Fill crankcase to proper oil level.


*Note: For repairs beyond the minor adjustments listed above, please contact your local Lawn Mower Service Shop.

CURB WHEEL ATTACHMENT

NORMAL EDGING

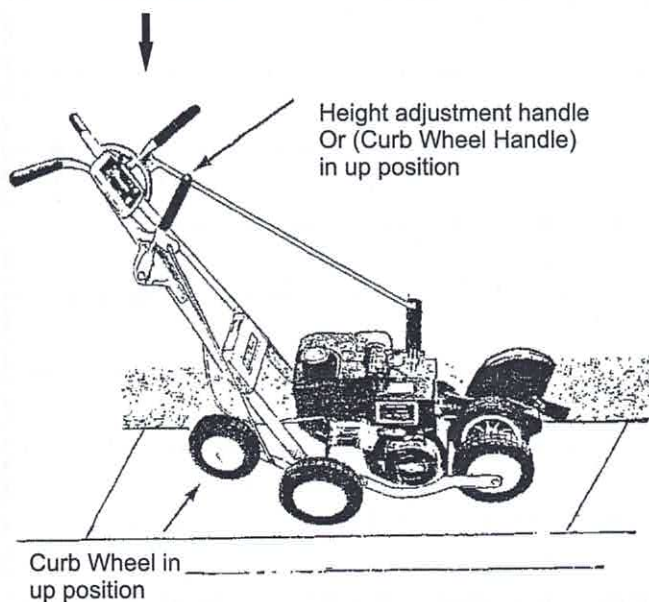

EDGING ON CURB

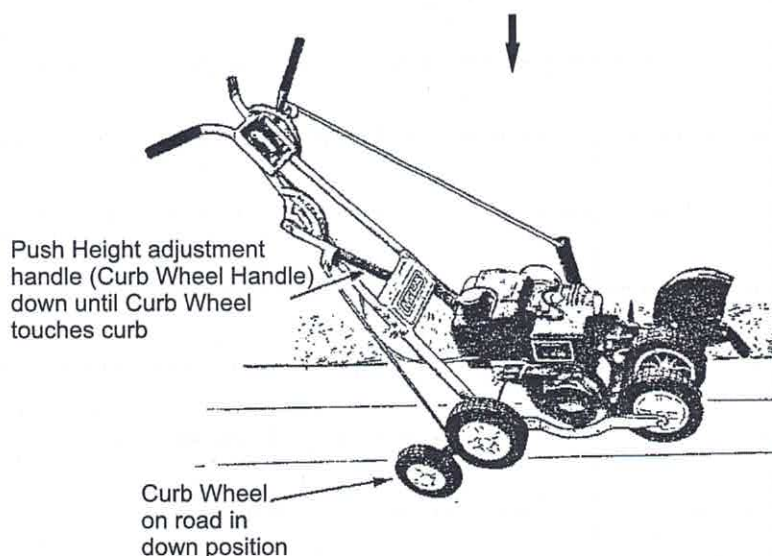

MAINTENANCE RECORD

[illegible]



TWO YEAR LIMITED WARRANTY

CUSTOMER NAME: _____ DATE OF PURCHASE: _____

ADDRESS: _____ CITY: _____ STATE: _____ ZIP: _____

ITEM: ROTARY ☐ REEL ☐ EDGER ☐ MODEL ☐ ENGINE
MOWER ☐ MOWER ☐ NO. _____ SERIAL NO. _____

For two years from purchase (60 days for commercial use) McLane Manufacturing, will replace original purchaser, free of charge, any part or parts found upon examination by any factory authorized service center, or by the factory in Paramount, California to be defective in material or workmanship or both. All transportation charges on parts submitted for replacement under this warranty must be borne by purchaser. There are no other expressed warranties. Implied warranties, including those of merchantability and fitness for a particular purpose, are limited to two years from purchase and to the extent permitted by law. Any and all implied warranties are excluded. This is the exclusive remedy and liability for consequential damages. Any and all warranties are excluded to the extent exclusion is permitted by law. Some states do not allow limitations on how long an implied warranty lasts, and some states do not allow the exclusion limitation of consequential damages, so the above limitation and exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

It is your responsibility to follow the maintenance instructions described in the owner's manual. Routine service (cleaning, blade sharpening) is your responsibility.
Defect of engine is covered by manufacturer of engine.

McLane Manufacturing

NOTE: Operator abuse and improper assembly of product is not covered by any written or implied warranty. Read your Owner's Manual.

WARNING TO PURCHASERS OF INTERNAL COMBUSTION ENGINE EQUIPPED MACHINERY OR DEVICES

This equipment does not include a spark arrestor muffler.

If this equipment is used on any forest-covered land, brush-covered land or grass-covered land in the State of California, the law requires that a spark arrestor be installed and in effective working order before using this equipment on such land. The spark arrestor must be attached to the exhaust system and comply with Section 4442 of the California Public Resources Code.

If this equipment is used in a state or national park or campground, a U.S.D.A. Forestry Department approved spark arrestor muffler must be utilized.

STORAGE INSTRUCTIONS

Edger trimmers stored for any length of time should be completely drained of fuel to prevent gum deposits forming on essential parts such as the carburetor and fuel tank. such deposits may effect the operation of the engine when used again. Therefore, it is important that the following instructions be adhered to before starting engine. 1. Drain fuel tank completely. 2. Operate the engine until it stops from lack of fuel to clean all gasoline out of carburetor. 3. While engine is still warm, drain the crank case. Refill with fresh oil. 4. Remove spark plug, pour one ounce of oil into the cylinder. Pull starter rope on the engine to spread the oil. Replace spark plug. 5. Clean dirt and chaff from cylinder and cylinder head fins, blower housing etc.

ATTENTION!

Are You Having Difficulty in:

- **ASSEMBLY?**
- **STARTING OR OPERATING PROCEDURES?**
- **MAKING ADJUSTMENTS?**

BEFORE returning to the store Where you purchased your unit,
PLEASE call our Toll Free Technical services Hotline:

(877) 633-8158

between the hours of 8 AM to 4 PM Pacific Time
Monday through Friday.

MCLANE

MANUFACTURING

6814 Foster Bridge Blvd.
Bell Gardens, CA 90201
(562) 633-8158
Fax: (562) 602-0651
www.mclanemower.com